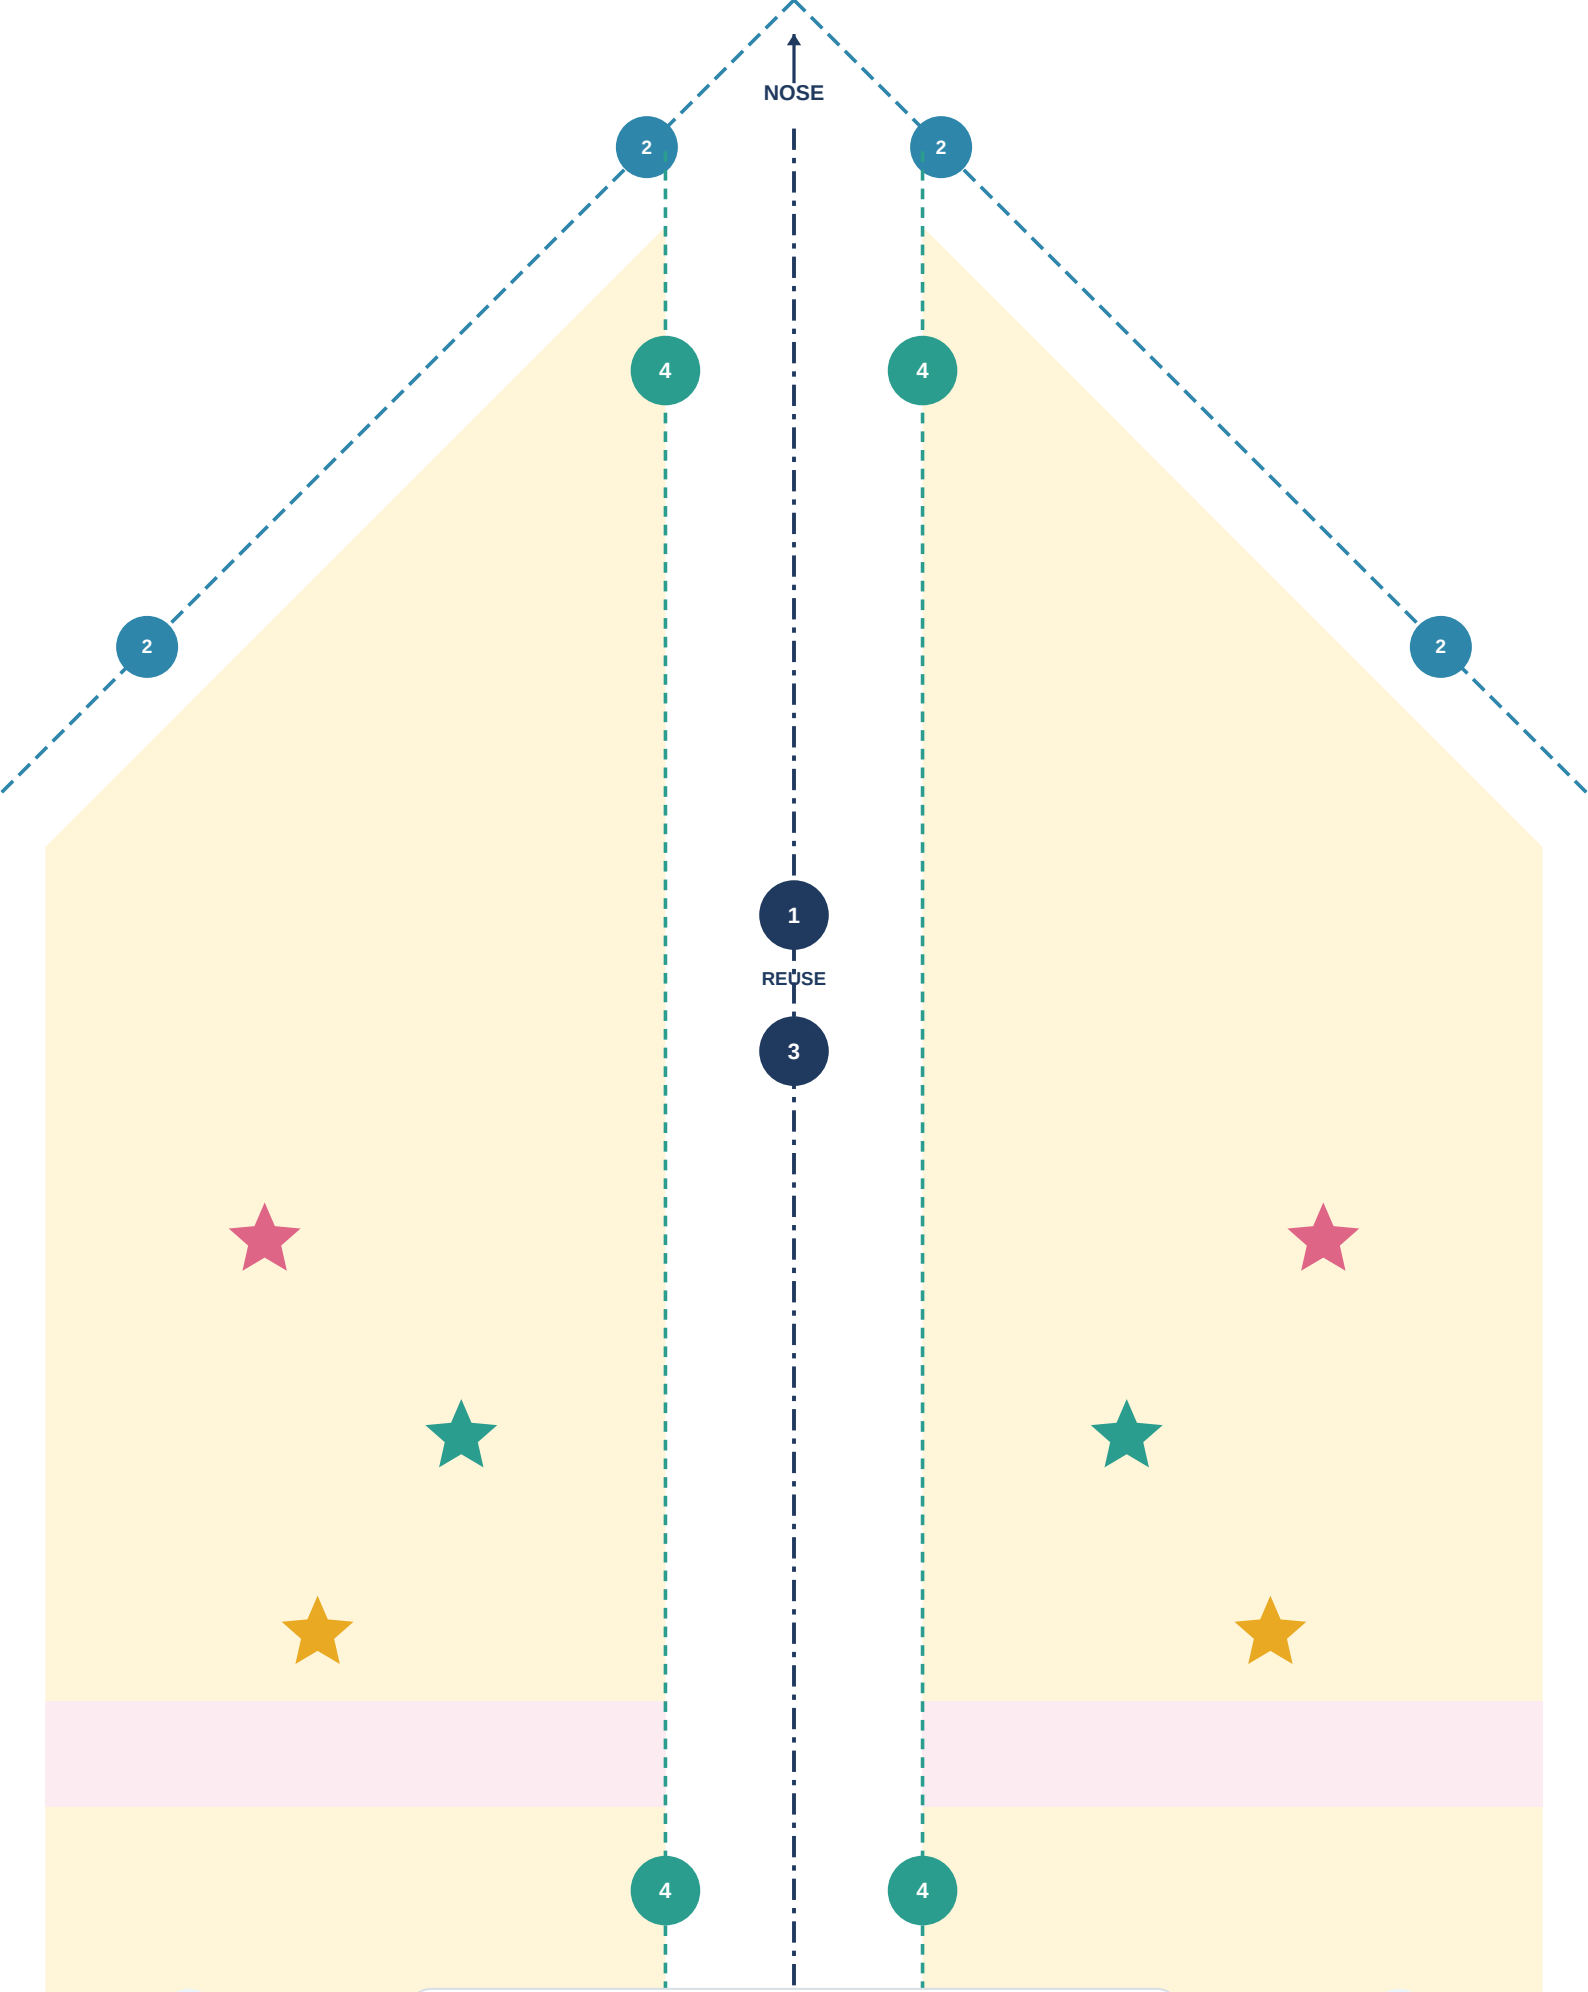


EASY BEGINNER PLANE

Use this whole sheet. Do not cut it.

Print at 100% or Actual size

Only 4 easy steps | Big picture guide on page 2


HOW TO FOLD AN EASY BEGINNER PLANE

Four simple steps with large pictures. Ask a grown-up for help with firm creases.

BEFORE YOU START Keep page 1 flat. Lightly pre-crease every dashed line, then reopen it.

The crease direction does not matter yet. Match the numbered lines to the four steps below.


1 Make the centre crease

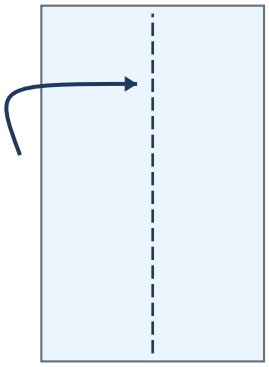

FOLD, CREASE, REOPEN


Fold line 1 lengthways. Press the crease, then open the sheet flat again.

2 Fold in the top corners

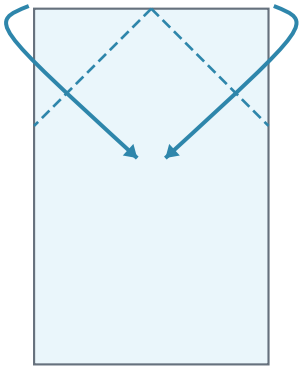

Fold both corners on lines 2. Make the top edges meet along the centre crease.


3 Fold the plane in half

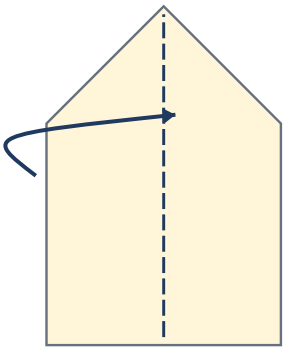

FOLDED CORNERS STAY OUTSIDE

Fold on the centre crease again. Keep the two folded corner layers on the outside.

4 Fold down both wings

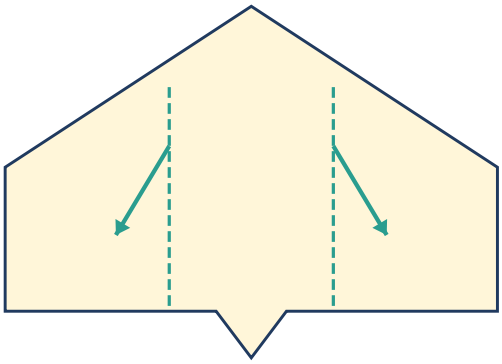

FOLD BOTH WINGS DOWN

Fold one wing on line 4. Turn the plane over and repeat. Open both wings until level.

READY TO FLY Hold the body underneath. Point it forward and use a gentle, level throw.

If it turns, check that both wings are the same height and that every crease is pressed flat.